



# AQUA-STREAM FACE CLEANSER | 8 IN 1

- Skin Scan & Personal Routine Guide
  - Superior Blackhead Extraction Technology
- Air Pulse Suction
  Deep Pore Cleansing
- Exfoliating Aqua-Stream Technology
- Hydrating Ultra
  Deep Aqua Cleansing
- Energizing Hydra
  Refreshing Technology
- Impurities Prevention

  Technology
- Redness and
  Dry Skin Reducer

Included Attachments Face Rinsing Nose



Create your personal Skincare Routine





GESKE Beauty Tech GmbH Leipziger Platz 18 10117 Berlin Germany info@geske.com, www.geske.com





# **GOOD TO KNOW**

TIP 01

Only fill the tank with water or the GESKE Aqua-Stream Solution. Always hold the device vertically during use, else, it will switch off. A beeping sound will alert you in case that's about to happen.

TIP 02

Your device comes with three attachments: The smaller tip is ideal for cleansing your nose and the bigger tip for larger areas like your cheeks and chin. The third attachment is for device rinsing.

TIP 03

Place the rinsing attachment onto the device & activate the Aqua-Stream Technology to flush out all residue from the tubes. Spray your device with our Organic Device Cleanser to clean.





On/Off Press for 1-2 Seconds



Water Tank
Easy to Fill









# MASTER THE FIRST STEPS

Our SmartAppGuided $^{\text{TM}}$  Aqua-Stream Face Cleanser | 8 in 1 rids your skin of dullness caused by impurities with the Exfoliating Aqua-Stream Technology, which gently unclogs your pores.



# **FULL FACIAL CLEANSE**

PREPARE

Remove the outer cover from the device and fill the tank with 12 milliliters of our Aqua-Stream Solution or water. Fit the tank back onto the device and put the cover back on.

POWER ON

Hold the power button for 2 seconds to turn on the Exfoliating Aqua-Stream Technology. Press the power button to cycle through the intensities and select your desired setting.

CLEANSE

Holding the device vertically, glide the device across your chin, cheeks, and forehead. Make sure to always keep the device in motion. Repeat on the other side of your face. Then, use the smaller tip to cleanse your nose and surrounding areas.

FINISH

Turn the device off by holding the power button for 2 seconds and empty the tank. Rinse the cap and tank with water and let dry. Apply a GESKE moisturizer to your face. Clean your device with our Organic Device Cleanser after every use.



# **FOCUS AREAS**

CHIN

Place the device at the bottom of the chin and glide it in an outward and upward motion along the jawline, up to the ear. Repeat.

JAWLINE

Place the device under the chin and glide outward under the jawbone. Return to the chin and make another stroke below the last one.

NOSE

Glide the device down the nose and in the harder to reach areas around the nose, making sure not to miss any blackheads.

FOREHEAD

Move the device to the inside corner of the eyebrow. Glide outward along the eyebrow and then up to the temple. Repeat.

# Create your personal Skincare Routine

and Download our GESKE App





















## IMPORTANT SAFETY INFORMATION. **READ BEFORE USE.**

Read the safety information before first use. Keep both instructions for use

#### Your product at a glance

Your product is a multi-functional deep cleansing and facial hydration device. It is safe to be used up to 3 times a week. For maximal safety and ideal results, always follow your personalized Skincare Routine created by the GESKE App.

#### Notes on Use

Before using the device for the first time, this Safety Information and the Product Manual must be read in their entirety. Please make sure to save a copy of both as they contain important information on safe use as well as on technical and legal information requirements. The device is a skincare product for adults and not a medical device or a product with medical or other healing properties. Use of the device should always include observance of the personalized application recommendations from the GESKE Beauty App. observance of the personalized application recommendations from the GESKE Beauty App. The device is rechargeable and allows for convenient and wireless operation. It must be fully charged before the first use. All you need is the included USB charging cable. The initial charge can take up to eight hours. The cable must dock with both magnetic contacts on the device's designated metal contact points. If the charging cable does not attach by itself, connect it to the power and wait. This reactivates the magnetic effect and the contacts connect automatically. Make sure that the magnetic contacts only connect to the contact points of the device and not to other metallic surfaces.

#### **Specifications**

Materials: ABS, silicone, PC | Storage temperature: -5 - +60 °C/23-140 °F | Battery: Li-lon 3.7V | Battery Capacity: 220 mAh | Maximum Charging Current: 220 mA | Charging Voltage: 5V | Charging Time: approx. 2 hours | Operating time differs depending on activated technologies & intensities. | Interface: USB | Programs: Vacuum Suction: 3 levels, Device Cleansing

## The product is not suitable for use under the following conditions:

After laser treatment or chemical peeling, and after facial surgery, both cosmetically and

# In the following cases, a consultation with a physician is necessary as to whether the product is suitable for you to use:

If you have a heart disease, if you have derma fillers or injections and in case of pregnancy. The safety of use during pregnancy has not been established.

#### Further information on use:

Never use the suction function in the same place for a longer period of time to avoid skin irritation, swelling or slight bruising. Start with the lowest intensity and slowly increase as needed. This product is not intended to treat medical skin conditions or diseases. If you have medical skin conditions or diseases, consult your dermatologist before using this product. Do not use the product of irritated or injured skin or open wounds (after any kind of injury), in the case of bacterial or viral infections of the skin (either in the usage area and elsewhere). Do not use the product if it is 1) untypically warm, 2) mechanically damaged or deformed, 3) discolored. If pain and/or discomfort occurs during use, discontinue use and seek medical advice. The eye area is very sensitive: Be extra careful in this area and avoid any contact of the product with the eyelids or the eye itself. Only use the product as recommended in your personalized routine. For hygiene reasons, we recommend you do not share your product with anyone else. The product is intended for cosmetic use on the face, neck and décolleté. GESKE assumes no liability for harmful consequences arising from the use on other body areas or other improper use, connection to unsuitable voltage sources, contaminated conducting liquid or balls. Always make sure the plug and socket are completely dry before charging. Otherwise, electric shocks, a short circuit or fire may result. The product must not be used while connected to the power outlet. Always hold the device vertically during use, as it will switch off otherwise. Only fill the device with (distilled) water or a mild toner. Do not fill with other liquids, such as liquid facial cleaners, disinfectants, alcohol or other aggressive chemicals. Do not fill the water tank with hot or boiling water. Always make sure that that is closed when filled with water to avoid leakage. Do not charge the device when the water tank is filled. leakage. Do not charge the device when the water tank is filled.

#### Warnings

Risk of injury if used incorrectly!

Only use the product as described in the Quick Start Guide and video instructions. If you still have questions, please contact our customer support at support@geske.com. Risk of injury due to fire/ignition!

Do not extinguish the product with water. Do not throw the product into fire.

Do not extinguish the product with water. Do not throw the product into fire. Risk of injury due to defective batteries!

Improper handling of batteries can cause an uncontrolled exothermic reaction. In such a case, dispose off the entire product immediately and properly.

Risk of injury to children!

Keep the product out of the reach of children.

#### Risk of injury from electric shock!

Risk of injury from electric shock!
Liquid can damage the charging circuit and endanger your health. Disconnect the product from the charging cable/circuit while cleaning.
Risk of damage from magnetic fields!
Magnetic fields can affect the mechanical and electronic components such as pacemakers, for example. Do not use the product directly over a pacemaker. Contact your treating physician for more information. Do not place cards with magnetic strips (e.g. credit cards) near the product, as the product's magnets may damage these.
Risk of damage due to changing surrounding temperatures!
Changing surrounding temperatures (e.g. after transport) may lead to the formation of condensation. In this case, do not operate the product until it has adjusted to the new surrounding temperature. Never expose your product to direct sunlight, extreme heat or boiling water.

Safe use up to a surrounding temperature of 50 °C/122 °F.
Risk of damage from charging too long!
Disconnect the charging cable from the circuit after each charging process. Safe charging up to a surrounding temperature of 45 °C/113 °F



Information on device disposal and WEEE. This electrical appliance was first released after August 13, 2005. In accordance with the European WEEE Directive and national regulations, the electrical appliances and electronic parts included in this delivery must not be disposed off via your household waste. At the end of the product life, they must be disposed off at a municipal collection point in order to ensure environmentally friendly

#### Notes on batteries / rechargeable batteries

In the context of distributing batteries and rechargeable batteries, in accordance with European regulations we are obliged to inform you, the consumer, of the following: You are legally obliged to return batteries and rechargeable batteries. After use, you can return ther to us, take them to a municipal collection point, or deliver them to a local dealer free of charge. Batteries and rechargeable batteries are labelled as follows:







These symbols mean that the batteries and rechargeable batteries cannot be disposed off by you, the consumer, via household waste. Batteries and rechargeable batteries containing harmful substances are labelled with one of these symbols. The symbol consists of a crossed-out wheeled bin and the chemical symbol of the heavy metal which constitutes the main pollutant. In detail, the aforementioned symbols mean:

Pb = battery contains lead, Cd = battery contains cadmium, Hg = battery contains mercury

#### Notes on lithium batteries/rechargeable batteries

You can recognise lithium batteries and lithium rechargeable batteries through the chemical symbol, Lit\*. In addition to the information provided above, we would also like to point out the following: When disposing off lithium batteries or rechargeable batteries, either by returning them to us, taking them to a municipal collection point or handing them in to local retailers or public waste disposal companies, please ensure that they are completely discharged. We also request that you cover the contact surfaces on the battery marked ,+" and »~ with adhesive tape to avoid the risk of fire.



GESKE Beauty Tech GmbH, Leipziger Platz 18, 10117 Berlin hereby declares that all electronic devices conform with the relevant conditions of the applicable European Directives 2014/30/EU and 2011/65/EU.

# Limitation of liability

GESKE Beauty Tech GmbH and/or their retailers are liable for damages caused by intentional or grossly negligent behaviour of GESKE Beauty Tech GmbH, a representative or vicarious agent, in accordance with legal directives. With the exception of injury to life, limb or health, and breach of essential contractual obligations (cardinal obligations), GESKE Beauty Tech GmbH and/or their retailers are only liable for damages which can be attributed to intentional or grossly negligent behaviour. This also applies to indirect damages, in particular lost profits. Moreover, liability with regard to consumers due to an assumed guarantee, except in the case of intentional or grossly negligent behaviour, or where there is an injury to life, limb or health and a breach of essential contractual obligations (cardinal obligations) is limited to the typical, foreseeable damages on conclusion of the contract, and also to the level of the average damages typical for this contract. This also applies to indirect damages, in particular lost profits. With regard to companies, except in the case of injury to life, limb and health or intentional or grossly negligent behaviour by GESKE Beauty Tech GmbH, and/or its retailers liability is limited to the typical, foreseeable damages on conclusion of the contract, and also to the level of the average damages typical for this contract. This also applies to indirect damages, in particular lost profits. No liability will be accepted for damages due to: Non-compliance with this manual/Improper use/Unauthorised alterations/ Technical modifications/Use of unapproved spare parts/Use of unapproved accessories Claims for liability due to the German product liability legislation remain unaffected.